


Tubular Specialties Manufacturing, Inc.

13011 South Spring Street, Los Angeles, CA 90061-1685 Phone 800/Grab Bar (800/472-2227) or 310/515-4801 www.GrabBar.com • Fax 310/217-0653 5428

Surface Mounted Stainless Steel Medicine Cabinet

Technical Data

Revised June 2006

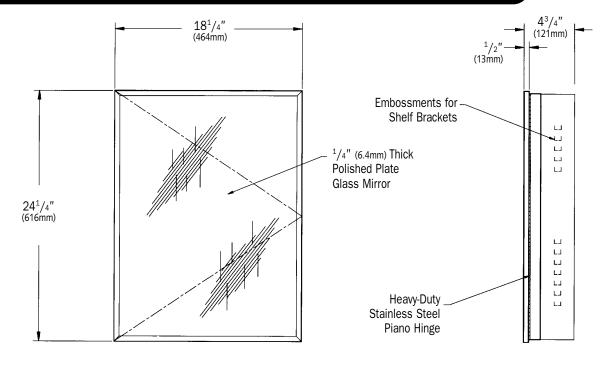



Specification

Surface Mounted Stainless Steel Swing Door Medicine Cabinet shall be fabricated of 20 gauge stainless steel alloy 18-8, type 304. All exposed surfaces shall have #4 satin finish and be protected during shipment with a PVC film easily removable after installation. Mirror glazing shall be #1 quality 1/4" thick polished plate glass, silver coated and shall be warranted for 15 years against silver spoilage. Mirrored door shall be hung on full-length 3/16" (5mm) dia. multi-staked

heavy duty stainless steel piano hinge and shall be held closed by magnetic catch. Cabinet shall be provided with three (3) adjustable stainless steel shelves.

Surface Mounted Mirrored Swing Door Medicine Cabinet shall be Model 5415 as manufactured by Tubular Specialties Manufacturing, 13011 South Spring Street, Los Angeles, California 90061, tel 800-Grab Bar.



Operation

Access is gained to the three (3) adjustable shelves by disengaging magnetic catch and swinging open the door.

Adjustable shelves permit storing various size articles.



Installation

- 1. For general utility, mount cabinet 46" (1168mm) above finished (AFF) from bottom of unit, or 12" (305mm) above top of wash basin. Secure cabinet in place with four (4) fasteners (provided by others) through mounting holes in cabinet back. Cabinet is universal for left-hand door swing and may be inverted to produce a door with a right-hand swing if required. To comply with ADA Accessibility Guidelines, install unit so that the bottom edge of the reflecting surface is no higher than 40" (1016mm) AFF.
- 2. It is the installer's responsibility to select fasteners that are appropriate for the wall or partition condition and application.
- Accessories should be inspected periodically to make sure their attachment to the wall is not loosening.

